EVOBOOK

User manual

EVOLIO

the interactive dimension

Chapter 1Product Specification
Chapter 2 Button Instruction
Chapter 3 Menu Introduction
Chapter 4 Books
Chapter 5 Music Play
Chapter 6 Picture Explorer
Chapter 7 My Bookmarks
Chapter 8 Favorites
Chapter 9 Recent
Chapter 10 File Explorer
Chapter 11 settings
Chapter 12 User Manual
Chapter 14 Charging
Chapter 15 USB connection
Chapter 16 Importing DRM Contents

Chapter 1

Product Specifications

- Display: 6 inches Electronic Paper Display
- Resolution: 600x800 pixels (16 Greyscale)
- Processor: Samsung S3C2416
- RAM :DDR2 64 MB
- Battery:：1700mAh/3.7V Li-Polymer Battery
- Adapter: DC5V 800mA；
- Supported Text Formats: PDF、CHM、EPUB、TXT、HTM、HTML、RTF、PDB、DJVU、DJV、iw44、iw4、FB2、OEB、PRC、MOBI、TCR、OPF
- Supported Audio Formats: MP3 (32kbps-384kbps)
- Supported Image Formats: JPEG, PNG, TIF, GIF, BMP
- Expandable Memory: SD Card/ MMC
- Supported Languages: Romanian,Russian,Spanish,Dutch, English,German,French,Italian,Portuguese,Bulgarian,Croatian,Cz-ech,Estonian,Greek,Hungarian,Latvian,Lithuanian,Polish,Serbian,Slovak,Slovenian,Swedish,Turkish.
- Dimensions:178(l) x128.4 (w) x 9.9(h) mm
- Weight: 228g

Chapter 2

Introduction to Parts of the Ebook

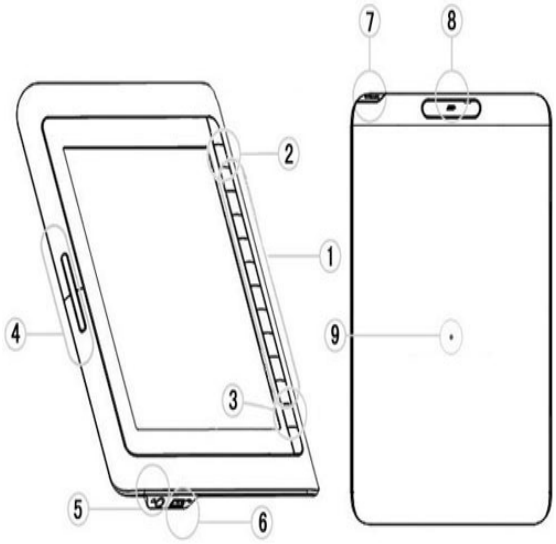

FRONT

1 – Direct Access Buttons

To select the items on the screen.

2 – Page Turning Buttons

To turn to the next page or the previous page.

3 – 3.5 mm Headphone Jack

To connect headphones for audio playback.

4 – USB connector

To connect to the USB charger or PC for charging.

REAR

7 – Power Button

To switch on/off the Ebook.

8 – SD card slot

For inserting of SD memory card.

9 – Reset Button

To reset the Ebook if no operation is possible.

Use a toothpick or clip or something like that to touch the reset button on the back. Then turn on the device as usual procedure.

Chapter 3

Menu Introduction

Press and hold the power button to enter the menu interface. There are

1 – Books

This allows you to access books loaded onto the Ebook.

2 – Music

This application lets you access and play audio files stored on the Ebook.

3 – Photos

This application lets you view photos loaded onto the Ebook.

4 – Bookmarks

This will show up the whole list of bookmarks that are made by the user.

5 – Favourites

This will show up the whole list of items set as favourite by the user.

6 – Recent

Items read or used by the user will be shown.

7 – File explorer helps in organizing the files better.

8 – Settings

The Ebook can be customized by personalizing the Setting function.

9 – User Manual

This is to access the pre-loaded User Manual in the Ebook

Chapter 4

Books

(The number under the “Books” represents: unread file/ all the file)

1. Press the corresponding button of “Books” to show all the stored e-book files;

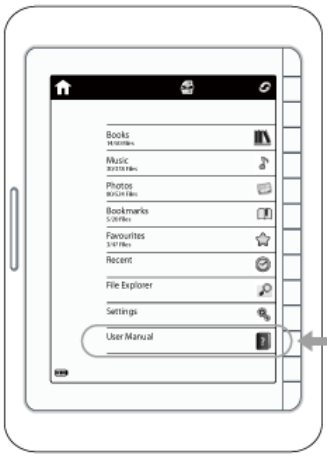

2. Operate the ← → button to turn this page in e-book list

3.Press menu butto once submenu function appears;

3.1 Refresh

Press this Refresh button and this screen can be Refreshed

3.2 Book face Display

To show the books with book cover in list.

3.3 Booklist Display

To show the book with book cover in thumbnail.

3.4 Sort By Name

To show the list of the books arranged by first alphabet of the name of the book.

3.5 Sort By Author

To show the list of books sorted by author.

3.6 Sort By Type

To show the list of books sorted by file format.

3.7 My Favorites

Press “My Favorites” to show the favorite books already added.

3.8 Add Favorites

Press “Add Favorites” , you will go to page showing the list of books, choose the book by pressing the corresponding button, the book will be ticked on the right, press confirm, then you can find the books ticked in “My Favorites”.

3.9 - Page

Go directly to the desired page, by inputting the page number.

3.10 - Search

Find a book stored in the ebook by inputting a word or phrase from it’s title.

3.11 – Music

Go to music playback interface to access and control the music available on the ebook.

3.12 – Return

Closes the drop down menu and return to the book’s menu.

4. Choose a book to read

4.1 Press ← → to turn the page in vertical

4.2 Press to turn the page in lateral.

5. Press menu button once submenu function appears when reading；

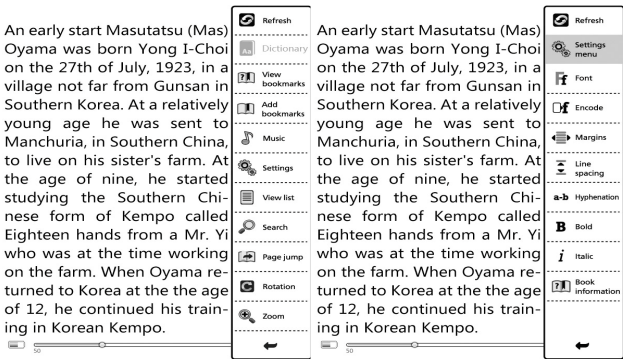
An early start Masutatsu (Mas) Oyama was born Yong I-Choi on the 27th of July, 1923, in a village not far from Gunsan in Southern Korea. At a relatively young age he was sent to Manchuria, in Southern China, to live on his sister's farm. At the age of nine, he started studying the Southern Chinese form of Kempo called Eighteen hands from a Mr. Yi who was at the time working on the farm. When Oyama returned to Korea at the the age of 12, he continued his training in Korean Kempo.
Refresh
Dictionary
View bookmarks
Add bookmarks
Music
Settings
View list
Search
Page jump
Rotation
Zoom
An early start Masutatsu (Mas) Oyama was born Yong I-Choi on the 27th of July, 1923, in a village not far from Gunsan in Southern Korea. At a relatively young age he was sent to Manchuria, in Southern China, to live on his sister's farm. At the age of nine, he started studying the Southern Chinese form of Kempo called Eighteen hands from a Mr. Yi who was at the time working on the farm. When Oyama returned to Korea at the the age of 12, he continued his training in Korean Kempo.
Refresh
Settings menu
Font
Encode
Margins
Line spacing
Hyphenation
Bold
Italic
Book information

5.1 Refresh

Press this Refresh button and this screen can be Refreshed

5.2 Dictionary

5.2 View Bookmarks

Press “View Bookmarks” to check the bookmarks already added；

5.3 Add Bookmark

Press “Bookmark add” to add the bookmark into the current page. The page which is added to the bookmark will appear, and

a bookmark mark will appear on the upper right corner of the screen.

5.4 Music

Press “music” function to go to the music player instantly.

5.5 Settings

Press “Settings” button into this Set up manual：

Mark: when read book in PDF format, this “reflow” instead of “settings”, PDF format is the photo-text layout so let Reflow function and Zoom function separately, when you find some words are covered by manual in right, at this status, press “reflow” and then press this “Zoom”, all words display no any covered.

5.5.1 Font

Press “Font” button to select different Fonts-Microsoft Yahei; Arial; Courier; Times; ARIALN

5.5.2 Encode

When reading, and if find some messy codes, please press this “Decoding setup” to select matching code.

5.5.3 Margins

Press “left and right margins”，to set up this distance in left and right.

5.5.4 Line spacing

Press “Line spacing”，to set up this distance of line by line.

5.5.5 Hyphenation

Press “Hyphenation”，to select if you need“-” or do not need to connect words

5.5.6 Bold

Press “Bold” to let all words display in Bold；

5.5.7Italic

Press “Italic” to let all words display in Italic；

5.5.8 Book Information

Press “Book Information” to look up this book news, including Name, format, decode and so on.

5.6 View list

Press “View list ”to go into this book’s directory, and select favourite directory to read directly (if this book is without directory, and you cannot check this directory)

5.7 Search

Press “text search”, enter the key letters in the input box and confirm. The entered contents will display in grey shadow. Press the corresponding button of ⬆⬇ to look up the previous or next key words.

5.8 Page Jump

Allows you to jump to the desired page by entering the page number.

5.9 Rotation

Press “Rotation” 90° to read in lateral；

5.10 Zoom

Press “Zoom” button to zoom in or zoom out.

5.11 Return

Press to close the drop down menu and return to the Book’s menu.

Chapter 5

Selecting from music list

(The number under the Ebook library represents: unread file/ all the file)

1. From the Main Menu, select “Music” to browse the Playlist stored on the Ebook.

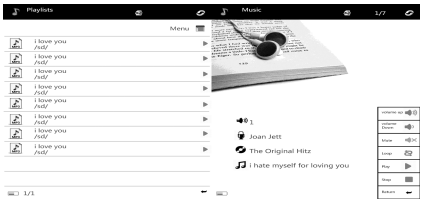

2. Press ← → to turn the page in playlist. Press menu

button to go to the menu function:

2.1 My favourites

Press “My Favourites” to go the page showing the list of favorite music saved.

2.2 Favorites

Press “Favorites” to go to page showing the list of music, choose the music by pressing the corresponding button, the music will be ticked on the right, press confirm, then you can find the music ticked in “My Favorites”.

2.3 Go to Page

Press “go to page”, flip the input box. Enter the page you want to go and confirm. The playlist will skip to the page.

2.4 Search

Press “ search”, flip the input interface, enter the key words of the music you want, then press search. The flipped window will show the searched file.

2.5 Return

Press “Return” to return from sub-menu.

Operate the button of corresponding music to play music.

Operate the menu to adjust the music.

3.1 To skip to the next track or return to the previous track,

press on the “ ← → ” button, press” ☰ ” to the sub-menu.

3.2 Press “volume up” 🔊/”volume down” 🔉 to adjust the volume.

3.3 Press “mute” 🔇 to enter mute mode, press again to resume the volume.

3.4 Press on the button “play mode” to change the music play mode. There are 3 modes: Random 🔀 Loop 🔁 and Repeat Once. 🔂

3.5 Press “play/pause” ⏯ to play or pause current audio playback.

3.6 Press “stop” to stop the current playing music.

3.7 Press “Return” to return back to the Music list.

Remarks: 1. The Ebook only support MP3 audio file.

3. The Ebook allows you to listen to your favourite MP3 while you are reading.

Chapter 6

Photo Explorer

(The number below the photo explorer in the main menu indicates: unread pictures/ all the pictures)

1. Press the corresponding button to enter “ Photo ”, displaying

all the picture list of different formats. Press “ ” to show sub-menu:

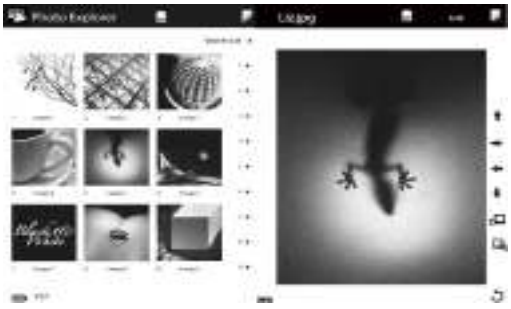

1.1 My favourites

Press “My Favourites” to go the page showing the list of favorite photo saved.

1.2 Favorites

Press “Favorites” to go to page showing the list of photo, choose the photo by pressing the corresponding button, the photo will be ticked on the right, press confirm, then you can find the photo ticked in “My Favorites”.

1.3 Go to Page

Go directly to the desired page by inputting the page number.

1.4 Search

Find a photo stored in the Ebook; by inputting a word from it’s title.

1.5 Thumbnails

View Photos in Thumbnails.

1.6 Music

Go to music playback interface to access and control the music available on the E-book.

1.7 Return

Close the drop-down menu and return to the Photo Explorer.

4. Photo view

Press the corresponding access button to view the pictures.

2.1 Press “ ”to rotate the pictures

2.2 Press “ “ to zoom in /out. After zoom in/out, press the corresponding button to move the picture up and down, left and right.

2.3 Moving direction key

Press to move the picture up.

Press to move the picture right.

Press to move the picture left

Press to move the picture down

2.4 Return

Press turn to the last interface.

Chapter 7

My Bookmarks

(The number under the “My bookmark” in the menu indicates: number of unread files/ number of all the books)

1. From the Main Menu, select “My bookmark” to browse all the

lists of the bookmarks and then Press” ’ for the sub-menu

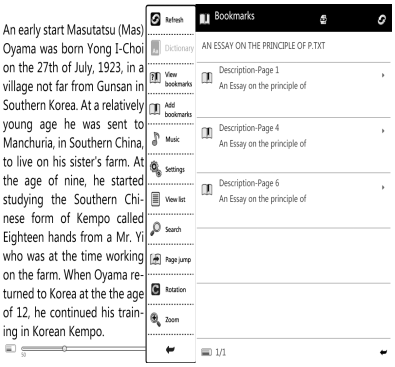
An early start Masutatsu (Mas) Oyama was born Yong I-Choi on the 27th of July, 1923, in a village not far from Gunsan in Southern Korea. At a relatively young age he was sent to Manchuria, in Southern China, to live on his sister's farm. At the age of nine, he started studying the Southern Chinese form of Kempo called Eighteen hands from a Mr. Yi who was at the time working on the farm. When Oyama returned to Korea at the the age of 12, he continued his training in Korean Kempo.
Refresh
Dictionary
View bookmarks
Add bookmarks
Music
Settings
View list
Search
Page jump
Rotation
Zoom
Bookmarks
AN ESSAY ON THE PRINCIPLE OF P.TXT
Description-Page 1
An Essay on the principle of
Description-Page 4
An Essay on the principle of
Description-Page 6
An Essay on the principle of
1/1

1.1 Delete

Press the Delete button for the left hollow sign, choose the desired deleted files, repeat press the delete button for the solid sign for confirmation.

1.2 Go to Page

Go directly to the desired page, by inputting the page number.

1.3 Search

Find an audio file stored in the EBook by inputting a word or phrase from it’s filename.

1.4 Music

Go to music playback interface to access and control the music

available on the Ebook.

1.5 Return

Closes the drop down menu and return to the my book marks

2. Choose the desired bookmarks for reading, the file below the book marks indicate the number of pages and indications of the content that once set for bookmarks

Chapter 8

My Favorites

1. When reading, listening or browsing picture , my favourites file can collect the favourites of books ,music and photos.

From the Main Menu, select “My favourites” to browse all the lists of my favourites and then Press” ” for the sub-menu.

1.1 Move out

Press the corresponding button “move out”, the round dot on the right of the files are empty. Choose the files you want to move out.

The round dot becomes solid. Press confirm to move the file into the favourite list.

1.2 Go to Page

Go directly to the desired page, by inputting the page number.

1.3 Search

Find an audio file stored in the EBook by inputting a word or phrase from it's filename.

1.4 Music

Go to music playback interface to access and control the music available on the Ebook.

1.5 Return

Cloose the drop down menu and return to the my favourites

Chapter 9

Recent

1. Press the corresponding button "recent" to show all the latest read book list. Press "menu" key show the submenu.

1.1 Moving files

To press the corresponding menu & choose the file to move out of the favorite list;

1.2 Favourites
Choose the book you want to collect by press Favourites to add in the list. When you instruct the main menu, you can read your favourites directly from Favourites.
1.3 Go to page
To input the page# then press confirm to show the exact page you want to see.
1.4 Search
Choose “Search” with input interface, input the key words for search then click it, it will show the files searched.
1.5 Music
Choose “music” to work with music mode quickly, click return to withdraw the submenu
1.6 Return
Click “return” to return back from the submenu.

Chapter 10

File explorer

1. Press the corresponding direct access button to enter “file explorer” to find “Internal Memory” and ‘SD Card” view all the files in Internal Memory and SD card. Press “menu” the drop-down menu has the following options:

1.1 Cut

Press the corresponding access button “cut”, the round dots on the right of the list are empty. Choose the file which you want to cut by pressing the corresponding button, then the chosen round dot becomes solid . Press confirm to choose the file you want to put in the cut file and press “menu” to paste. Then the chosen file will be cut into this file.

1.2 Copy

Press the corresponding access button “copy”, the round dot on the right side of the list is empty, choose the file you want to copy by pressing the corresponding button, the round dot becomes solid, press confirm and press “menu” to paste. Then the chosen file will be copied into this folder.

1.3 Delete

Press “delete”, the round dot on the right of the list is empty. Choose the file you want to delete by pressing the corresponding button, the button becomes solid. Press confirm to delete the chosen files.

1.4 Paste

Choose the files you want to cut or copy and paste into the folder.

1.5 Add Favourites

Press “Favourites”, the round dot on the right of the list is empty, choose the favourite files by corresponding button, then the round dot becomes solid . Press confirm to save the files.

1.6 Go to page

Press “go to page”, popup the inputting box, enter the page you want and confirm to show the page you want;

1.7 New folder

Press “New folder” to jump to the interface of inputting, enter the file name and confirm, the list will show the new folder name;

1.8 Search

Press “search”, popup the inputting interface, enter the key word of the file and press “search”, the popup window shows the list of searched files;

1.9 Music

Press “music” to enter the music player instantly;

1.10 Return

Press “Return” to return back from sub-menu.

To choose the file to move then to press confirm. To Copy or Paste the file & put the files to the file you want to save.

1.2 Delete

Select “Delete” from the drop down menu to delete files or folders stored on the SD Card.

Select files or folders in the selection menu to be deleted. Press the “Done✔” button to confirm files or folders to be deleted.

*Files deleted are non-recoverable.

1.3 Favourites

Choose the file with a filled circle ▢ save it under collection menu. Books & music undergoing can be collected.

1.4 Go to Page

To input the page# then press confirm to show the exact page you want to see.

1.5 New Folder

You can create new folders to organize your files better.

Select “Menu” in the Directory you want to create the new folder in. Press on “New Folder” on the Drop down Menu to create the folder.

1.6 Search

Choose “Search” with input interface, input the key words for search then click it, it will show the files searched.

1.7 Music

Choose “music” to work with music mode quickly, click return to withdraw the submenu.

1.8 Return

Press Return to get back to last menu bar

Chapter 11

Settings

From the Main Menu, to select the “Settings”, below sub-menu will list: Device Setting, Auto Shutdown Settings, About Product and Restore Factory Settings.

1.Device settings

1.1 Press “Device Name” Select Device Name to personalize the Ebook name. A text input menu will appear to allow you to input the text.

1.2 Press “Language”, Then press on the corresponding Direct Access Button for multiple languages set；

2. Auto Shutdown Settings

2.1 Press “Auto Shutdown Settings”, there are 10 minutes;20Minutes; 30Minutes;Disable for you to make your choice, Ebook to shut down automatically after it idles for a preset

duration；（default 10 minutes to shut down itself automatically）

3.About Product

3.1 This page provides information of the Ebook including its software version and its customer

4. Restore Factory Settings

4.1 Using the buttons located on the left side of the screen to confirm the restoration. Press on the button indicating “Return” to ⬅ exit the restoration. Press on the “Confirm✓” to validate the restoration. The Ebook will be restored to its original factory settings

Chapter 12

User Manual

From the main menu to access the pre-loaded User Manual in the Ebook.

Chapter 13

Charging

Ebook reader are with 2 charging method：

1. Connect the ebook to the computer's USB Port via the supplied USB Cable,

2. Connect the ebook to the USB charger；

Charging by the USB charger，It charges faster than by using the computer's USB Port

Chapter 14

USB Cable

1.can connect to computer for charging；

2.to choose charging model，can play and read external stored files by using USB cable；

3.to choose data transmission model，plug the USB cable to computer，the computer will display removable disk icon, then we can copy the files from computer directly to ebook reader.

Note：The photos showed in this manual are for reference only. The product spec and design are subject to changes without prior notice.

Chapter 15

Importing Content -Importing DRM Contents

The Reader supports Adobe DRM contents. Adobe Digital Editions (ADE) is required.

Installing Adobe Digital Editions (ADE)

• Connect the Reader to PC via the supplied USB cable and open the reader as removable disk. Go to [My Computer], double click on the reader's disk to open.

•you can download the installer from http://www.adobe.com/products/digitaleditions/#fp .

•For first time user, you will need to get a free adobe ID from adobe website. Click on the [get an Adobe ID online] link as illustrated:

• Enter your email address and complete the online form as per instructed.

Importing and Transferring Content

Authorizing PC and Reader

• Upon registration, return to the ADE window. Enter the username and password to activate your Adobe account.

• After activation, connect the Reader to PC. ADE will detect the

Reader and you are prompted to authorize device.

• After authorization, you will be able to find the Reader recognized in ADE as below. Contents inside the Reader will be displayed on the right hand windows.

• You can now start downloading or buying ebooks from online Ebook stores supporting Adobe DRM.

• Purchased or downloaded ebooks will be stored in [My Digital Editions] in [My Documents].

Transferring DRM ebooks to Reader

• From ADE menu, click on [All Items] on the left hand column

• Items in [My Digital Editions] will be listed down in right window.

• Select the desired item(s) to be transferred.

• Drag and drop the selected item(s) into the Reader's Drive located on the last row of the left side column as illustrated below.

Opening Book

• Books transferred to Reader will be listed in Home Menu.

• Reader supports ebooks in epub, pdf, txt format.

• Use the <Directional> buttons to move the cursor to select book and press <OK> to open.

Turning book page

• On reading page, press <Next Page> or <Directional-Right> button to turn to next page. To turn to previous page, press <Previous Page> or <Directional-Left> button.